





TYRE INFLATION PRESSURE GUIDE

The tyre pressure placard for your vehicle is positioned on the right front door opening. Tyre pressure information supplied can assist the owner with selection of the correct tyre pressure setting suited to your driving conditions. Tyre pressure settings vary depending on the applications the vehicle is used for. Speed, weight and driving surface conditions will need to be considered when adjusting the tyre pressures suited to your application.

A more detailed chart is available to assist the owner with the recommended settings for a wide range of conditions. If you have any further enquiries please contact ATW.

TYRE INFLATION 65PSI

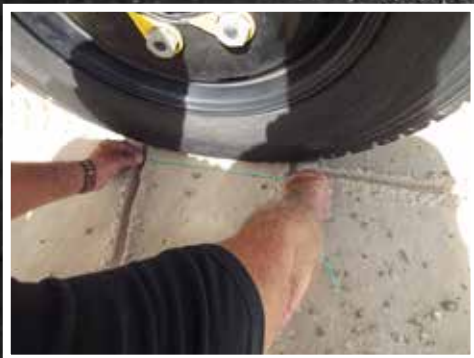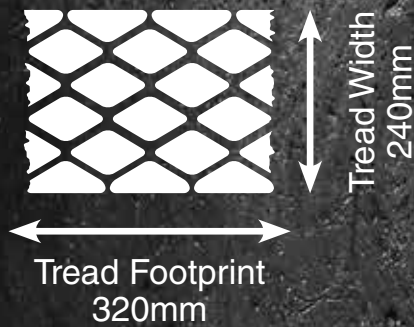

TYRE INFLATION 20PSI

